# SZCOM/RK®

## Ci-SF110/120

General Serial Data to Fiber Optic Converter

ShenZhen Comark Technology Co., Ltd.

#### Tel: 86-755-26055466

Fax: 86-755-22630031

Post : 518126

Addr: Floor 4, Building G, No. 2 Tangxi Industrial

Zone, No. 21, Xijing Road, Gu Shu, Xi Xiang, Bao'An

District, Shenzhen, 518126, P. R. China.

Website:http://www.comark.cn

#### Summary

Ci-SF110/120 series is designed for industrial grade serial data fiber optic converter, supports RS232/485/422 general serial networks. Support Modbus/MPI/PPI etc many Fieldbus to Fiber optic converter, Supports single and dual optical daisy network. Featured with 35mmDIN rail mounting, IP40 metal case (wave grain aluminum reinforce case option), DC (18~36V) dual redundant power input (can be customized with 9~18VDC), relay output alarm, dual redundant power input and isolation protection function. Ci-SF110 supports one fiber interface and one data bus interface, Ci-SF120 supports two way cascade fiber interface and one data bus interface.

#### Characteristic

- Support RS-232/485/422 Ports
- Support 1~2 Fiber Optic Ports, ST connector (SC, FC Optional)
- Support Optical Fiber link failure and power error alarm LED indication
- Support Modbus/MPI/PPI etc many Fieldbus to Fiber optic converter
- DC (18~36V) dual redundant power input (can be customized with 9~18VDC), With DC1500V voltage isolation and reverse connect protection
- IP40 protection, Metal case (wave grain aluminum reinforce case option), 35mmDIN-Rail Installation
- Operating Temperature: -40°C to 75°C suitable to various Industrial work situation

#### Specification

#### Bus data interface

- RS-232 baudrate: 0~115.2Kbps, support RXD, TXD, GND three line works.
- RS-422 support RX-, RX +, TX-, TX + full-duplex mode ;RS-485 support A, B half-duplex mode;RS-485/422 baudrate:0~2Mbps optional
- constant voltage 1000V
- Resistor: the unit has 220 ohms, use corresponding switch to make it to be enable

#### **Optical Interface**

- Wave length: multi-mode 850nm、1310 nm; single mode 1310 nm、1550nm
- Fiber type: multi-mode 50/125um 、 62.5/125um 、

#### More Reliable Connection, More Intellegent Life

100/140um;single mode 8.3/125 um  $\searrow$  9/125um  $\searrow$  10/125um

- Transmission distance: multi-mode 2km, single mode 20km.
- Fiber interface type: ST/SC/FC (optional); ST (standard configuration).
- Single Fiber wavelength: A: Transmit wavelength is single mode 1310nm, then Receive wavelength is 1550nm; B: Transmit wavelength is single mode 1550nm, then Receive wavelength is 1310nm

#### Power

DC (18~36V) dual redundant power input (can be customized with 9~18VDC), industrial standard voltage DC24V, consumption is less than 1.5W, With DC1500V voltage isolation and reverse connect protection, adopt 5 cores 5.08mm industrial terminal port (please use industrial standard power, otherwise it will occur unit error or damage).

#### Protection

- Relay: Fiber link fault alarm
- Contact rating: 1A @24V DC, Industrial Terminal port

#### Mechanical

- Dimensions (H×D×W): 136mm×104.8mm×52.8mm
- Weight:800g
- Casing: IP40 protection, wave grain aluminum reinforce case option
- Installation: Wall mounting or DIN rail mounting

#### Environmental

- Operating Temperature:-40 °C ~75 °C (-40 °C ~85 °C optional)
- Storage Temperature: -40°C~85°C
- Ambient Relative Humidity: 5%~95%(non-condensing)

#### Warranty

Warranty Period: 5 years

#### Certifications

- IEC61000-4-2(ESD):  $\pm$ 8KV Contact,  $\pm$ 15KV Air
- IEC61000-4-4(EFT):Power  $\pm$  1KV, Data Cable  $\pm$  1KV
- IEC61000-4-5(Surge):Power ± 2KV CM/ ± 1KV DM, Relay±2KV CM/ ±1KV DM
- IEC60068-2-27(Shock)
- IEC60068-2-32(Free Fall)
- IEC61000-6-2(General Industrial Standard)



#### EN50121-4 (rail transit) **Overall Dimension** -52.80-SZCOMAR -52.80-¥OOx ON DIP KX3 CT40 ACT2 iber Optic (±) O KX OOT1 VC О 36.00 0000 PWR F2 RELAY $\cap$

## Front view

LED	Indicators	

LED		state	Description	Alarm				
PWR					off		Non-connect or error	No
PVK		light	Power is ok	No				
		off	Fieldbus is closed	No				
RX		shine	Copper port is normal, can received data	No				
		off	Fiber link is normal, have no Signal	No				
OPT1-2	RX1~2	light	Fiber link error	Yes				
OPTI-2		shine	Fiber link is normal, have Signal	No				
	ACT1~2	off	Fiber link is normal	No				

light	Fiber	link	RX	End	Yes	
iigin	error				165	

### Terminal Resistor

Resistor is to eliminate the effect of the signal reflected in communication cable, can be connected in the two terminal nodes of the cable as needed. Photoelectric converter is to make cable bus segment, each segment on both ends of the cable can be an external resistor as needed. Please refer to the bus standard resistor connection mode, such as using splitter.

#### Connection

04.80

Top view

1. Bus cable wiring methods: when using the RS485, terminal Rx+ connect with A line of RS485, Rx- with B line.

#### Pull-switch settings:

I all ownton oot				
switch setting interface	S1.1	S1.2	S1.3	S1.4
RS-232	ON	OFF	OFF	OFF
RS-485	OFF	ON	OFF	ON
RS-422	OFF	OFF	ON	ON


S1.5: ON: RS-485/422 Receive end is connected to Terminal resistor 220R

S1.6 : ON: RS-422 transmit end is connected to Terminal resistor 220R

(220 ohms, other resistance value is invalid, connect to suitable terminal resistor)


S1.7: NC S1.8: NC


DB9 pin-hole definition:

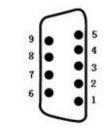

DB9	1	2	3	4	5	6	7	8	9
RS-2	N	TX	RX	Ν	GN	-	-	-	-
32	С	D	D	С	D				
RS-4	-	-	-	-	-	-	-	Α	В
85									
RS-4	-	-	-	-	-	TX	Т	RX	R
22						+	Х-	+	Х-


More Reliable Connection, More Intellegent Life

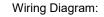

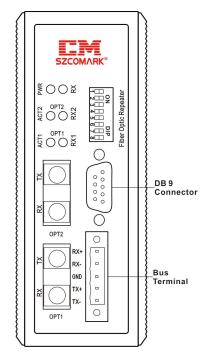


2. Fiber connection methods:


as shown in the figure below, the optical fiber must cross connection, namely the RX connect other side TX, and TX to RX accordingly. Ci-SF110 is one fiber port device, suitable for point-to-point connection; Ci-SF120 is dual fiber port device, suitable for bus network topology, one optical port (OPT1) to connect with front-end equipment, the other optical port (OPT2) with back-end equipment, optical fiber must cross connection.

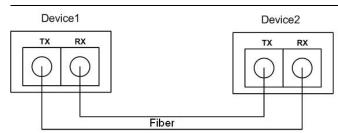

Single Fiber module(single fiber device), as shown in the figure below, single fiber can transmit and receive Signal,. Note, Single fiber use 2 different wavelength to transmit and receive signal, and its paired module transmit and receive wavelength is opposite.( Device1 transmit wavelength is 1310nm, receive one is 1550nm; device2 receive wavelength is 1310nm, transmit wavelength is 1550nm.)

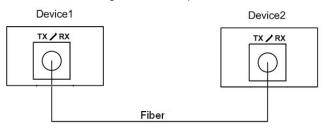

- 3. Power connection as shown in the figure below, this device supports dual redundant input, V1 +, V2 + respectively connect the anode of power supply (DC18 ~36V), COM with cathode (double power sharing). (can be customized with 9~18VDC)
- 4. Relay alarm output connection: F1, F2 in normal open. When the alarm is closed, make F1, F2 both contacted in series with external alarm circuit (e.g., buzzer, etc.).(When there is no electricity on device, the relay is closed.)

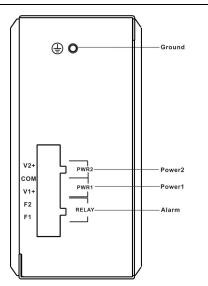

## DIN-Rail Installation


In order to use in industrial environments expediently, Ci-SF110/120 adopt 35mm DIN-Rail installation, the installation steps as follows:

Step 1: Examine the DIN-Rail attachment

Step 2: Examine DIN Rail whether be firm and the position is suitability or not.


Step 3: insert the bottom of the DIN-RAIL into the slot, then insert the top of the DIN-RAIL into the slot.

Step 4: after insert the DIN-RAIL into the slot, check the device is installed into the slot firmly.

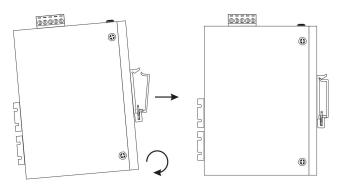

#### More Reliable Connection, More Intellegent Life

Typical Application Point to Point

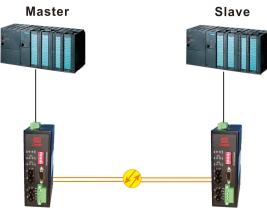


**Daisy Chain** 





#### Star Topology

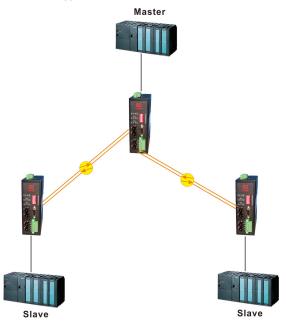

## Troubleshooting

Fault Symptoms	What to Do
PWR off	Check and ensure the power supply meets the requirement, and terminal wiring is correct or not.
RX off	Serial data communication is abnormal, check the connector.
OPT1~2 RX1~2 off butACT1~2on	Check the fiber port connection, the length and type is correct or not.

## Package Checklist

Please check accessories completely when open the box.

Packing list is as follows:

- Serial data fiber optic converter (with industrial terminal block for power equipment)
- Product specification
- Product warranty card

#### Cautions

- Please use DC24V Industrial standard power( if customized with 9~18VDC, please use DC 12V Industrial standard power). Please use 0.75mm<sup>2</sup> above quality copper line.
- When relay alarm output, the voltage and current can exceed the rated one(1A@24VDC), otherwise, it will damage the unit.
- When the fiber port is not used, please use fiber cap to cover up to avoid pollute the fiber port.
- Please don't look the device fiber transmit port directly, avoid the light damage eyes.
- This device is precision communication instruction, please insure its ground connection well, the device ground connection is via the landing screw on the sideboard, please use the professional landing line, which is less than 2.5 mm<sup>2</sup>, and landing resistor is less than 50hms.

<b>^</b> I		
Urder	Informat	ION
0.00.		

Part No.	Description
	RS-232/485/422 serial port, 1 Fiber Optic port, Single mode / Multi-mode(optional),
Ci-SF110	Single Fiber / Double Fiber( Optional),
	18v~36VDC (9~18vdc Optional)
	RS-232/485/422 serial port, 2 Fiber Optic
Ci-SF120	port, Single mode / Multi-mode(optional),
	Single Fiber / Double Fiber( Optional),
	18v~36VDC (9~18vdc Optional)